

i.MX31 and i.MX31L Power Management

by: Boris Bobrov, Michael Priel

1 Executive Brief

Microprocessors have long been classified, rated, differentiated and marketed on their clock speed, measured in kilohertz, megahertz, and now even gigahertz. When processors were still fairly simple machines, this measure was sufficient. In today's mobile global society, using the clock speed as a measurement is inadequate and outdated. Current microprocessors designed with the clock speed accelerated consume power rapidly, compromising battery life. The complexity of today's microprocessor architectures mandates a new metric.

Freescale's engineers believe the capabilities of processor architectures, not the speed of their clocks, is the key to increased functionality and the performance mobile device manufacturers and consumers demand. So, from the transistor level to memory accesses, and from software builds to power saving modes, innovative thinking and engineering at Freescale Semiconductor has resulted in the i.MX family of applications processors with Smart Speed Technology. The i.MX processors enable wireless mobile devices to deliver

Contents

1 Executive Brief	1
2 Power Consumption Model	2
3 Dynamic Process Temperature Compensation	3
4 Dynamic Voltage Frequency Scaling	4
5 Power Saving Modes	6
6 Power Domains	8
7 Active Well-Bias (AWB)	8
8 State-of-the-Art Clock Tree Design	9
9 Conclusion	10
10 Revision History	10



longer performance times with plenty of energy available to drive power-hungry applications, such as video conferencing and 3-D gaming.

The primary target of the i.MX31 and i.MX31L processors is the mobile device market; thus, a lot of thought and effort has been invested to optimize performance and provide longer performance time for mobile systems based on the i.MX31 and i.MX31L. In this white paper, we describe some non-application-specific techniques and mechanisms deployed in these processors that significantly prolong the battery life of the device.

Here is a brief look at the i.MX31 and i.MX31L Advanced Power Management features:

- Dynamic Process Temperature Compensation (DPTC)—dynamic adjustment of the supply voltage relative to the current temperature and the manufacturing process used.
- Dynamic Voltage Frequency Scaling (DVFS)—reduction of operating voltage to the *minimum* level needed to support only the *minimum* operating *frequency* required by running applications at the given moment. The i.MX31 and i.MX31L bring the concept to new heights by introducing an automatic hardware mechanism for DVFS control that requires minimum CPU resources and software (OS and drivers') complexity.
- Three separate Power Domains—CPU (ARM), peripherals, and the PLLs, provide the ability to save power in one domain while the others remain functional.
- Power Gating—the ability to shut down the entire IC (hibernate) or only the most power-hungry ARM® Platform power domain in standby mode.
- Independent low-power modes for different power domains, including the following modes:
 - Stop—Clocks off
 - Doze—Turn off the clocks/PLL
 - Hibernate—Power down
 - State Retention—Retain ultra-low voltage
- Active Well Biasing—Reduces standby leakage by up to 15 times by lowering the well voltage of the transistor. Standby leakage is a great concern in sub-micron manufacturing processes' IC designs in the semiconductor industry.
- Careful and power-friendly IC design with 3 levels of clock hierarchy, enabling shutting down clocks to the parts of logic that are not used by the running application.
- Technology choice for optimum trade-off between speed and low-power, high-performance, yet with leaky transistors (*low-Vt*) versus ultra-low power semiconductor circuits (*high-Vt*) for functional modules with modest performance requirements.

2 Power Consumption Model

Power consumed by a semiconductor device has two components—dynamic and static:

$$P_{\text{total}} = P_{\text{dynamic}} + P_{\text{static}}$$

The dynamic power should be considered in only the active mode, when signal values are switching, and when analog circuits change their state, in other words, when operations occur because of the device performing its function. The dynamic power is defined by:

$$P_{\text{dynamic}} = C_{\text{capacitance}} \times V_{\text{voltage}}^2 \times F_{\text{frequency}}$$

In the formula, the voltage is squared, and so has had a great effect on the consumed power and, thus, on the battery life.

On the other hand, the static power which is significantly smaller than the dynamic power when the device is in its active mode, plays the main role in the Standby Mode (a cellular phone in its inactive state, a PDA that is switched off, etc.) which is the dominant mode in the lifetime of the device. In typical usage Standby time is longer than active time by a factor of ten.

$$P_{\text{static}} = f(\text{leakage current})$$

Static Power is a function of leakage, which, on its own, is dependent mostly on the manufacturing process used, the size of the die, and the voltage in the transistor well as shown in [Figure 1](#). While the DPTC and DVFS techniques reduce dynamic power consumption, all other techniques primarily address the Static Power in standby.

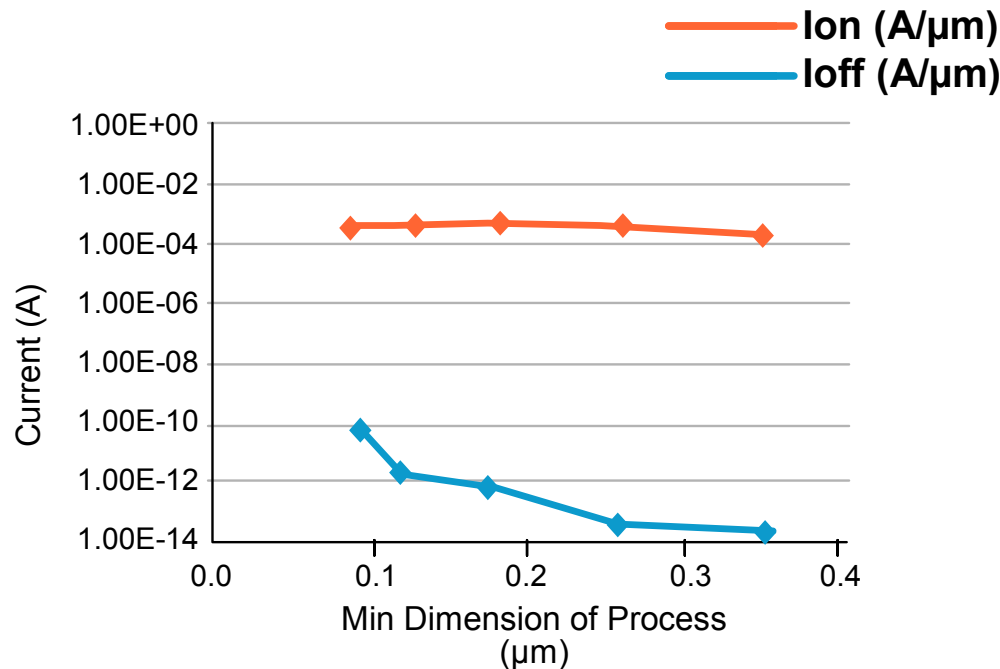


Figure 1. Leakage Current vs. Manufacturing Process

3 Dynamic Process Temperature Compensation

A key engineering philosophy at Freescale designing processors that perform under “worst case” conditions. Worst case in the semiconductor industry applies to very high temperatures and variations in the manufacturing process; transistor performance varies in a predefined range of parameters. Thus, some IC parts in the same lot come out capable of supporting higher operating frequencies (fast process), or lower frequencies at the bottom of the pre-defined performance window (slow process) at the given voltage. The Dynamic Process Temperature Compensation (DPTC) mechanism ([Figure 2](#)) measures delays of reference circuits that are dependent on the process speed and temperature, then lowers the voltage to the minimum level needed to support the current operating frequency.

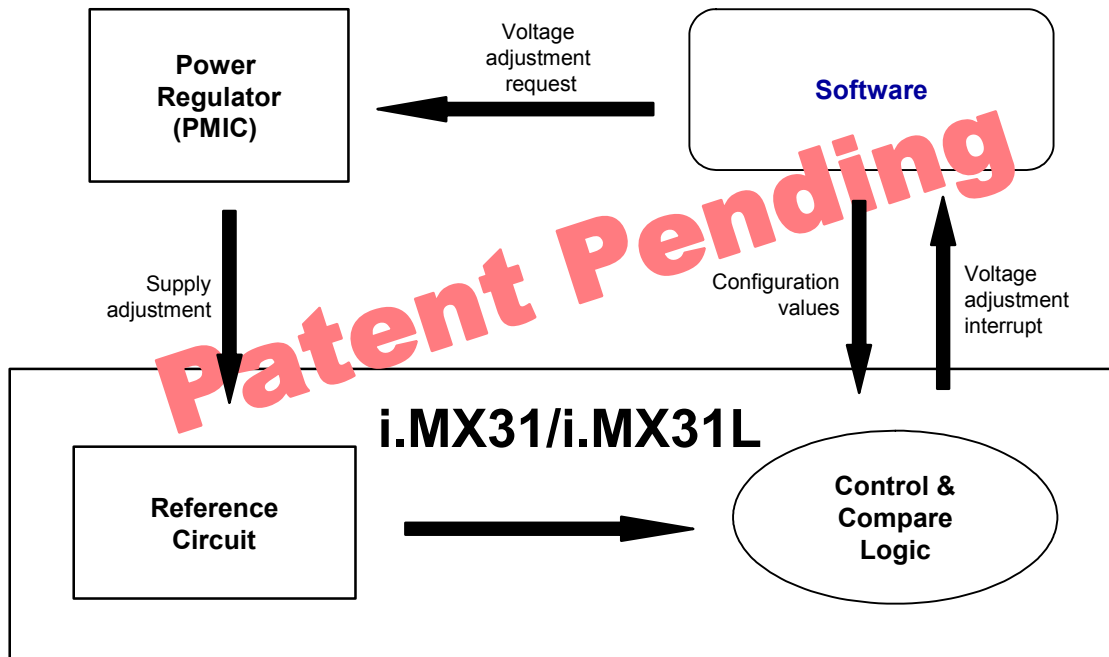


Figure 2. Dynamic Process Temperature Compensation (DPTC) Mechanism

So, a device containing a fast-process IC operating in a moderate climate condition can be expected to work at the worst-case calculated voltage to support the required frequency. In room temperature conditions, a typical process case 1.2 V is enough for DPTC-enabled 90 nm i.MX31 and i.MX31L processors, while a conventional 90 nm design will require 1.6 V. This may result in a power savings approaching 40%, thereby nearly doubling the battery life.

The inputs from reference “sense” circuits are processed by internal control and compare logic and written to software-readable registers. If there is a significant (pre-defined) change in the reference circuit delay values, an interrupt is triggered, then the relevant software interrupt routine calculates the new required voltage and re-programs the Power Management IC (PMIC) to supply the new voltage to the i.MX31 and i.MX31L processors. After the new voltage is applied the reference circuit delay, values change, providing feedback and closing the loop of the DPTC mechanism, making sure the system stabilizes at the proper voltage level.

4 Dynamic Voltage Frequency Scaling

Dynamic Voltage Frequency Scaling (DVFS) is an advanced technique that allows on-the-fly frequency adjustment according to the current performance requirements of the system. By lowering the frequency, it is possible to lower the operating voltage (on-the-fly as well), thereby dramatically reducing the power consumption. The concept is not new, but the major innovation introduced in the i.MX31 and i.MX31L processors is an autonomous hardware mechanism that controls the frequency and voltage with minimal software involvement. Also, the performance requirements (system load) are monitored by dedicated hardware sampling the internal signals of the i.MX31 and i.MX31L processors, such as CPU execution status, data bus requests, and signals.

DVFS works in conjunction with DPTC making sure the minimal voltage is applied, taking into account both the performance and process-temperature conditions.

Figure 3 shows two approaches to DVFS that the i.MX31 and i.MX31L processors support.

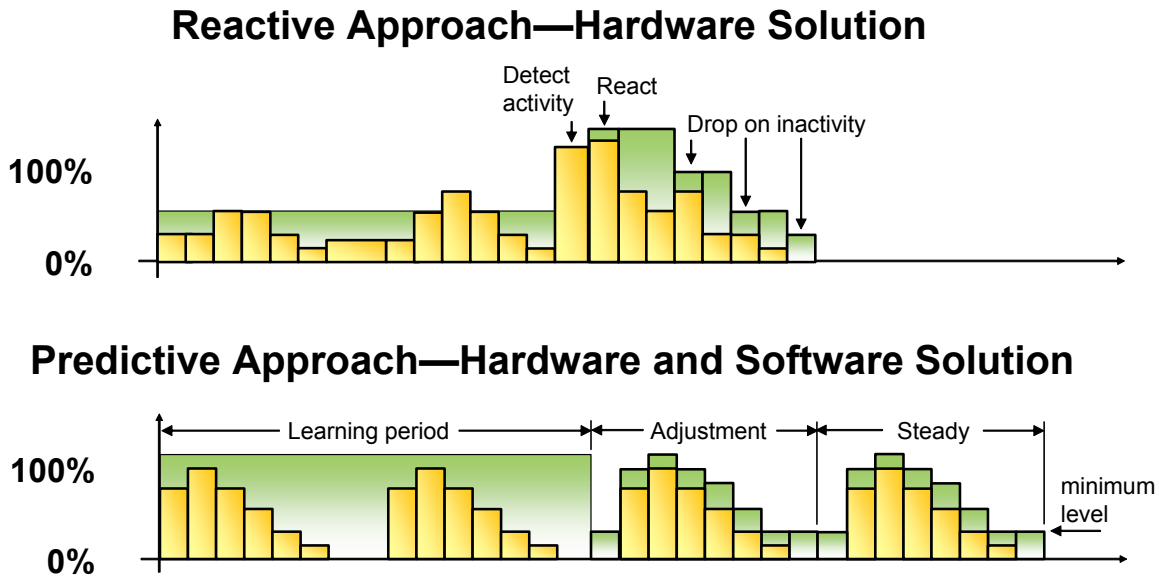


Figure 3. DVFS Approaches

The reactive approach is a hardware-driven mechanism with a minimal software interference (some initialization and occasional tracking required). In reactive mode the DVFS hardware measures system load. When it detects changes in performance requirements, it adjusts automatically the voltage and frequency.

The predictive approach is a software-driven mechanism, where the i.MX31 and i.MX31L DVFS hardware writes the system load measurements to the dedicated software-readable registers. The hardware also provides the interface for the software to program a pre-defined pattern for voltage and frequency. The example shown in Figure 3 describes a case where the software analyzes the system load pattern and tries to predict the future load. After it generates a prediction, it programs the DVFS hardware with a voltage-frequency pattern. In the case of an inaccurate prediction, an adjustment can be easily made.

For extreme cases when there is a sudden surge in the system load, requiring maximum performance from the system, the panic mode of the DVFS activates, switching to the maximum frequency and voltage.

Figure 4 on page 6 shows the DVFS hardware details.

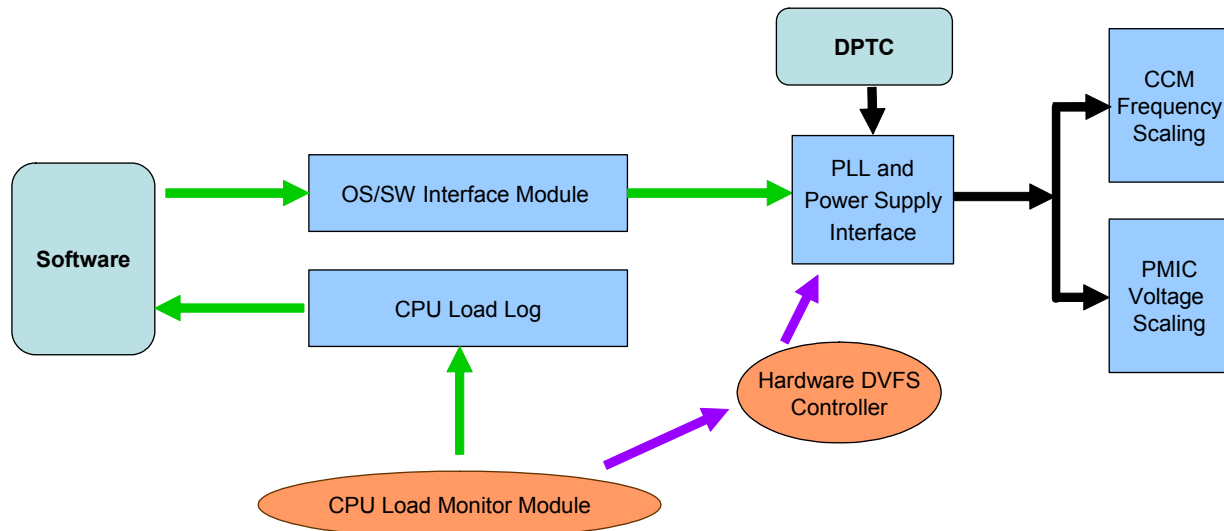


Figure 4. DVFS Hardware Mechanism

The hardware signals from different i.MX31 and i.MX31L functional units are sampled by the system load monitor logic. Pre-defined programmable weights can be assigned to different signals providing all the necessary input for the software to adjust the DVFS hardware behavior. The weighted and processed system load value is written to the system load register. This register value is sampled to the system load log so that the software DVFS algorithm can analyze system behavior and provide necessary adjustments by programming the frequency-voltage pattern register.

The system load register also outputs its value to the reactive logic. The reactive logic includes software-pre-programmed threshold system load levels. Once the system load changes by crossing a threshold boundary, the reactive logic sends a command to the DVFS interface to switch voltage and frequency. If the system load suddenly jumps to a pre-defined maximum performance threshold value, the system triggers the panic mode, switching as soon as possible to the highest voltage and frequency level. The system response time in this case is negligible, since everything is done automatically, independent of the CPU state and the software (OS) event latency policy.

Software complexity involved in the reactive mode is negligible—primarily involving initial system setup and occasional adjustments during runtime. For the predictive mode, the software developer can implement as complex algorithm as desired, as the i.MX31 and i.MX31L processors provide all the hardware tools for that.

5 Power Saving Modes

The i.MX31 and i.MX31L processors offer many different power saving modes, giving the system developer the ability to trade off between power consumption in stand-by and recovery times as shown in [Figure 5 on page 7](#). One of the important features is the hardware handshake of the i.MX31 and i.MX31L clock controller with peripherals before entering a low-power mode. This allows the relatively power-hungry ARM core to enter a low-power mode immediately without waiting for the peripherals to complete their tasks.

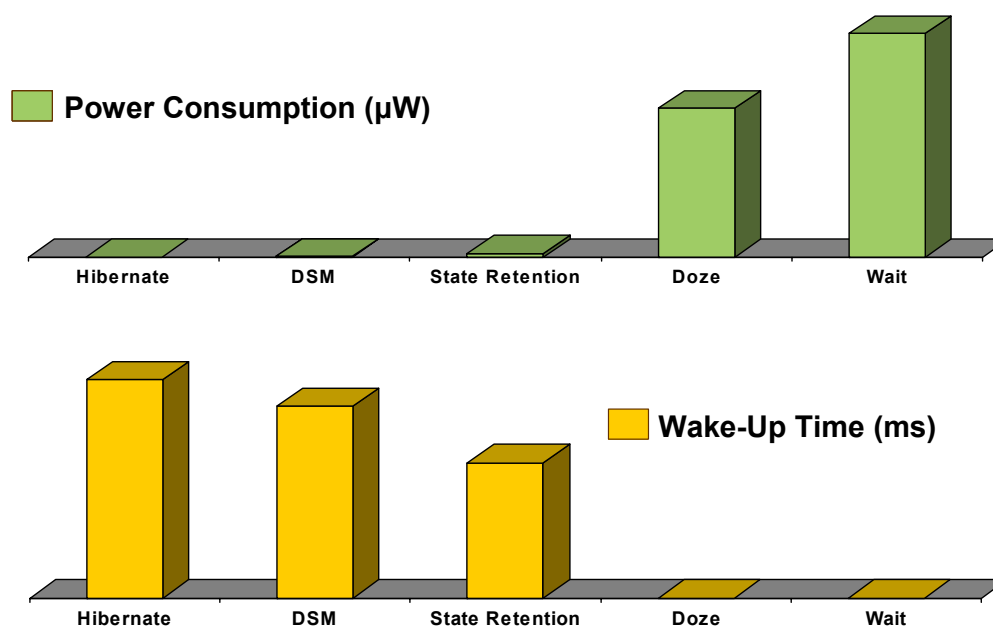


Figure 5. Power-Saving Modes vs. Wake-Up Time

5.1 Run

This is the normal, functional operating mode of the i.MX31 and i.MX31L processors. Frequency and voltage may vary according to DVFS and DPTC standards.

5.2 Wait

In this mode, the ARM11™ MCU clock is stopped, but the i.MX31 and i.MX31L bus switch (MAX) and all peripherals' clocks remain active. This mode is useful for running low MIPS applications that primarily involve peripheral activity, such as a viewfinder that can be run with minimal ARM11 MCU involvement in i.MX31 and i.MX31L processors.

5.3 Doze

In this mode, both the ARM11 and MAX clocks are stopped. Clocks for specific peripherals can be switched off automatically in Doze mode by pre-programming the Clock Controller module. This mode is useful for processes that require quick reactivation.

5.4 State Retention

In this mode, all clocks are switched off and the PLL is disabled. External memory is put in low-power (self-refresh) mode. State retention uses less power and has a longer wake-up time than Doze mode, but there is no need to recover any data after the wake-up.

5.5 Deep Sleep

In this mode, the power supply of the ARM Platform—the biggest consumer of power in i.MX31 and i.MX31L processors—is shut down. Any relevant register data should be saved before entering Deep Sleep mode (WFI, otherwise known as Wait-For-Instruction).

5.6 Hibernate

The power supply of the entire i.MX31 and i.MX31L IC is shut down. All internal data should be saved to external memory prior to Hibernate.

6 Power Domains

Another important feature of the i.MX31 and i.MX31L processors is the division of the IC into power domains—providing the flexibility of clocking-off/powering-off different parts of the IC. The domains are as follows:

- MCU—Includes the ARM11 Core, the MMU, and the L1 Caches.
- L2 cache—Includes L2 cache data array.
- Peripheral—Includes all peripherals.
- PLL—Includes PLLs and the FPM (Frequency Pre-Multiplier).

7 Active Well-Bias (AWB)

Active Well-Bias battles the high-performance transistor current leakage of the advanced submicron manufacturing process technology of the i.MX31 and i.MX31L processors. By controlling the transistor well supply, the threshold voltage of leaky high performance transistors is reduced resulting in an increase of standby current by a factor of 10. Traditionally, the only shortcoming of the well-bias technique is the necessity to add an AWB Charge Pump to support the separate well supply. The i.MX31 and i.MX31L processors solve this problem by integrating their own AWB Charge Pump on-chip. [Figure 6 on page 9](#) shows a contrast of well-biased gate versus conventional design.

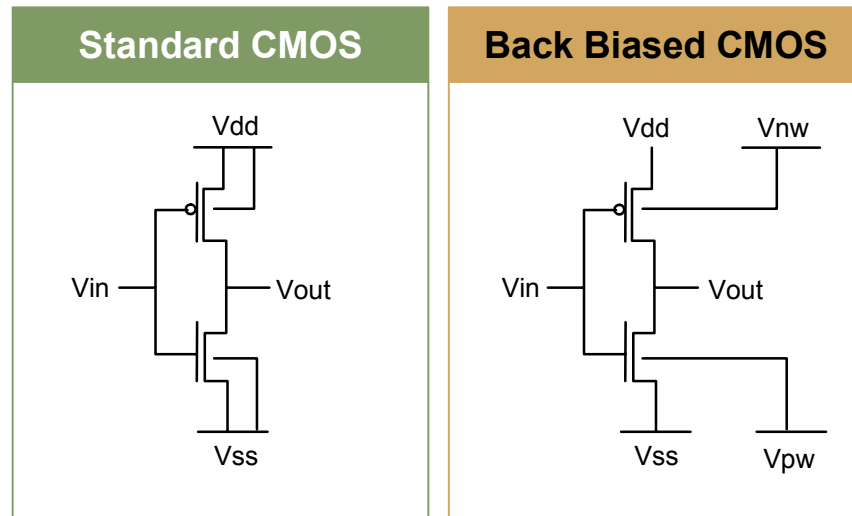


Figure 6. Well-Biased Gate vs. Conventional Design

8 State-of-the-Art Clock Tree Design

The clock tree is an important contributor to total power consumption, the clocks themselves being constantly switching signals when enabled and causing many other portions of logic to change value, drawing dynamic current. Balancing the clock tree is also very important not only to prevent functional failures, but to avoid unnecessary switching of logic values back and forth between different clock domains, until all clocks propagate. [Figure 7 on page 10](#) shows the clock tree diagram.

Three main methods were applied to the design as follows:

- Custom design of the clock controller—manual balancing of the clocks
- Clock gating in RTL of modules when they are functionally disabled
- Automatic design tools' clock gating

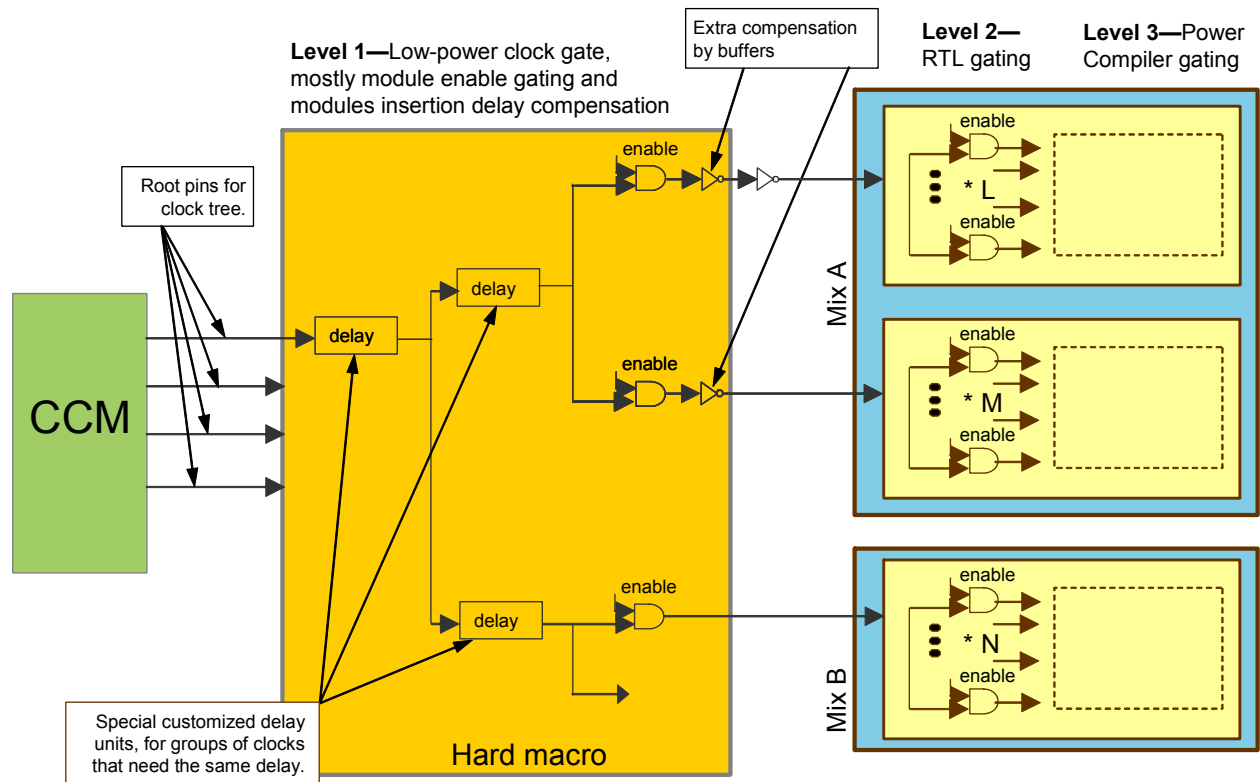


Figure 7. i.MX31 and i.MX31L Clock Tree Simplified Diagram

9 Conclusion

The i.MX31 and i.MX31L processors address all aspects of power management. They save dynamic power using the DPTC and DVFS, they reduce leakage with AWB, and they also offer multiple power saving modes. Devices having an i.MX31 or i.MX31L processor on-board will have all the means to multiply its operating time using the same battery versus using other conventional designs. All of the power saving is achieved using minimum additional software complexity and CPU load. The i.MX31 and i.MX31L processors open many new possibilities for the power aware system developer, as no other chip has done before.

10 Revision History

Rev. 1 changes the sentence in Section 7, Active Well Bias from:

By controlling the transistor well supply, the threshold voltage of leaky high performance transistors is reduced resulting in **a reduction** of standby current by a factor of 10.

To: By controlling the transistor well supply, the threshold voltage of leaky high performance transistors is reduced resulting in **an increase** of standby current by a factor of 10.

How to Reach Us:

Home Page:

www.freescale.com

E-mail:

support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor
Technical Information Center, CH370
1300 N. Alma School Road
Chandler, Arizona 85224
+1-800-521-6274 or +1-480-768-2130
support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064, Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 2666 8080
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
P.O. Box 5405
Denver, Colorado 80217
1-800-521-6274 or 303-675-2140
Fax: 303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. ARM and the ARM Powered logo are registered trademarks of ARM Limited. ARM11 is a trademark of ARM Limited. All other product or service names are the property of their respective owners. France Telecom – TDF – Groupe des écoles des telecommunications Turbo codes patents license.

© Freescale Semiconductor, Inc. 2005, 2006. All rights reserved.

射频和天线设计培训课程推荐

易迪拓培训(www.edatop.com)由数名来自于研发第一线的资深工程师发起成立,致力并专注于微波、射频、天线设计研发人才的培养;我们于 2006 年整合合并微波 EDA 网(www.mweda.com),现已发展成为国内最大的微波射频和天线设计人才培养基地,成功推出多套微波射频以及天线设计经典培训课程和 ADS、HFSS 等专业软件使用培训课程,广受客户好评;并先后与人民邮电出版社、电子工业出版社合作出版了多本专业图书,帮助数万名工程师提升了专业技术能力。客户遍布中兴通讯、研通高频、埃威航电、国人通信等多家国内知名公司,以及台湾工业技术研究院、永业科技、全一电子等多家台湾地区企业。

易迪拓培训课程列表: <http://www.edatop.com/peixun/rfe/129.html>



射频工程师养成培训课程套装

该套装精选了射频专业基础培训课程、射频仿真设计培训课程和射频电路测量培训课程三个类别共 30 门视频培训课程和 3 本图书教材;旨在引领学员全面学习一个射频工程师需要熟悉、理解和掌握的专业知识和研发设计能力。通过套装的学习,能够让学员完全达到和胜任一个合格的射频工程师的要求...

课程网址: <http://www.edatop.com/peixun/rfe/110.html>

ADS 学习培训课程套装

该套装是迄今国内最全面、最权威的 ADS 培训教程,共包含 10 门 ADS 学习培训课程。课程是由具有多年 ADS 使用经验的微波射频与通信系统设计领域资深专家讲解,并多结合设计实例,由浅入深、详细而又全面地讲解了 ADS 在微波射频电路设计、通信系统设计和电磁仿真设计方面的内容。能让您在最短的时间内学会使用 ADS,迅速提升个人技术能力,把 ADS 真正应用到实际研发工作中去,成为 ADS 设计专家...

课程网址: <http://www.edatop.com/peixun/ads/13.html>



HFSS 学习培训课程套装



该套课程套装包含了本站全部 HFSS 培训课程,是迄今国内最全面、最专业的 HFSS 培训教程套装,可以帮助您从零开始,全面深入学习 HFSS 的各项功能和在多个方面的工程应用。购买套装,更可超值赠送 3 个月免费学习答疑,随时解答您学习过程中遇到的棘手问题,让您的 HFSS 学习更加轻松顺畅...

课程网址: <http://www.edatop.com/peixun/hfss/11.html>

CST 学习培训课程套装

该培训套装由易迪拓培训联合微波 EDA 网共同推出,是最全面、系统、专业的 CST 微波工作室培训课程套装,所有课程都由经验丰富的专家授课,视频教学,可以帮助您从零开始,全面系统地学习 CST 微波工作的各项功能及其在微波射频、天线设计等领域的设计应用。且购买该套装,还可超值赠送 3 个月免费学习答疑...

课程网址: <http://www.edatop.com/peixun/cst/24.html>



HFSS 天线设计培训课程套装

套装包含 6 门视频课程和 1 本图书,课程从基础讲起,内容由浅入深,理论介绍和实际操作讲解相结合,全面系统的讲解了 HFSS 天线设计的全过程。是国内最全面、最专业的 HFSS 天线设计课程,可以帮助您快速学习掌握如何使用 HFSS 设计天线,让天线设计不再难...

课程网址: <http://www.edatop.com/peixun/hfss/122.html>

13.56MHz NFC/RFID 线圈天线设计培训课程套装

套装包含 4 门视频培训课程,培训将 13.56MHz 线圈天线设计原理和仿真设计实践相结合,全面系统地讲解了 13.56MHz 线圈天线的工作原理、设计方法、设计考量以及使用 HFSS 和 CST 仿真分析线圈天线的具体操作,同时还介绍了 13.56MHz 线圈天线匹配电路的设计和调试。通过该套课程的学习,可以帮助您快速学习掌握 13.56MHz 线圈天线及其匹配电路的原理、设计和调试...

详情浏览: <http://www.edatop.com/peixun/antenna/116.html>



我们的课程优势:

- ※ 成立于 2004 年,10 多年丰富的行业经验,
- ※ 一直致力并专注于微波射频和天线设计工程师的培养,更了解该行业对人才的要求
- ※ 经验丰富的一线资深工程师讲授,结合实际工程案例,直观、实用、易学

联系我们:

- ※ 易迪拓培训官网: <http://www.edatop.com>
- ※ 微波 EDA 网: <http://www.mweda.com>
- ※ 官方淘宝店: <http://shop36920890.taobao.com>